


ASSEMBLY INSTRUCTIONS

Base Cabinet Assembly Instructions:


Supplied Parts List:

- (A) Side Panel (Left)
- (B) Back Panel
- (C) Side Panel (Right)
- (D) Drawer Face
- (E) Door
- (F) (2) Bridge Board(s)
- (G) Adjustable Shelf
- (H) Bottom Panel
- (I) Drawer Box Back
- (J) Drawer Box Side (Left)
- (K) Drawer Box Bottom Panel
- (L) Drawer Box Side (Right)

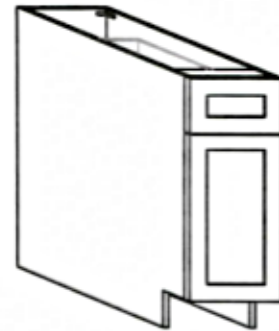

Assembled Cabinet

Drawing Not to Scale

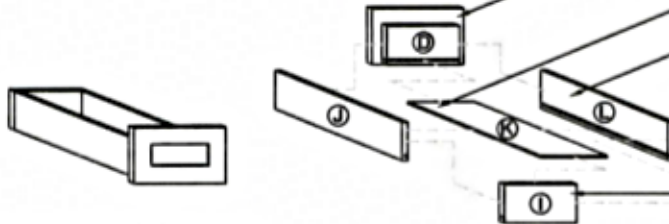


Assembled Drawer

Shown From Front - Drawing Not to Scale

Exploded Drawer View

Shown From Rear - Drawing Not to Scale

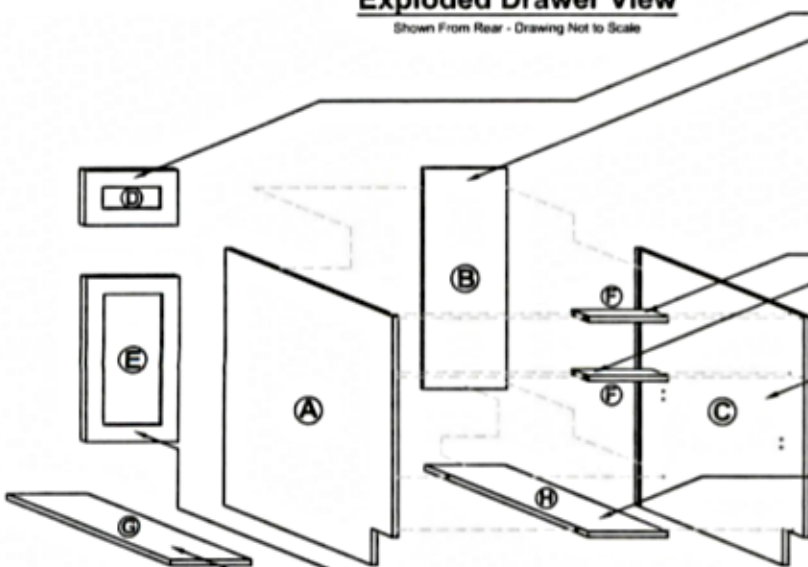

Exploded Cabinet View

Drawing Not to Scale

Drawer Face. Attach to Drawer Box Side(s) Using Pre-Milled Dovetailed Joint(s), Carpenter Glue, and (2) (Min.) 1 1/2" Brad Nails.

Drawer Box Bottom Panel. To Be Installed After Drawer Face, Drawer Box Side, and Drawer Box Back Have Been Married Together and Bead of Carpenter Glue Applied to Stated Part's Dado Cut Channel(s).

Drawer Box Side(s). Dado Cut Channel to Face Interior of Drawer Box. (3) Pre-Drilled Hole(s) on Outside of Drawer Box Side(s). Hole Near Edge/End of Drawer Box Side to Face Front of Cabinet. Use Pre-Drilled Hole(s) as Guides When Attaching Supplied Ball Bearing Drawer Glide(s). Attach to Drawer Face and Drawer Box Back Using Pre-Milled Dovetailed Joint(s), Carpenter Glue, and (2) (Min.) 1 1/2" Brad Nails.

Drawer Box Back. Dado Cut Channel to Face Interior of Drawer Box. Attach to Drawer Box Side(s) Using Pre-Milled Dovetailed Joint(s), Carpenter Glue, and (2) (Min.) 1 1/2" Brad Nails.

Drawer Face.

Back Panel. Smooth Side of Panel to Face Interior of Cabinet. To Be Installed After Bridge Board(s) and Bottom Panel Have Been Married to Side Panel and Bead of Carpenter Glue Applied to Side Panel(s) Dado Cut Channel(s) And Back Edge of Bottom Panel. Align Top of Back Panel With Top of Side Panel(s). (Press Panel Towards Interior or Face of Cabinet When Applying (Min.) 1 1/2" Brad Nails @ 6" o.c. (Typ.) Around Perimeter of Assembled Cabinet.) Use (2) L-Brackets at Top, Rear, Interior Corners.

Bridge Board(s). Finished Edge to Face, Face of Cabinet. Board(s) to be Married to Side Panel(s) Using (2) Pre-Installed Dowels, Carpenter Glue, and (2) (Min.) 1 1/2" Brad Nails.

Side Panel(s). Dado Cut Channel (Denotes Rear of Cabinet), and Pre-Drilled Side to Face Interior of Cabinet. After Being Fit to Bridge Board(s), Back, and Bottom Panel, Nail Pre-Glued Married Joints Using (Min.) 1 1/2" Brad Nails @ 6" o.c. (Typ.).

Bottom Panel. Unfinished Edge (Denotes Rear of Cabinet), Smooth Finished Side to Face Interior of Cabinet. Panel to be Married to Side Panel(s) Using (2) Pre-Installed Dowels, Carpenter Glue, and (Min.) 1 1/2" Brad Nails @ 6" o.c. (Typ.).

Door. To Be Installed After Assembly and Installation of Cabinet Using Supplied Hinge Hardware to Finish Cabinet.

Adjustable Shelf. To Be Installed After Assembly and Installation of Finished Cabinet.